



Bag Maintenance

Dear Slingers,

it goes without saying that it is imperative to regularly clean your Slinger Bag, in order to prevent court dust, ball fuzz and/or dirty getting into your Launcher. This can affect the performance of your Slinger Bag and ultimately lead to defects. Furthermore, proper storage of your Slinger Bag will ensure a longer lifespan and optimal performance.

Please find important information on MAINTENANCE and STORAGE below.

MAINTENANCE

After use, ball fuzz or court dust can typically build up on the fascia of the launcher. This is best removed using readily available pressurized air canisters, or by using a damp cloth.

- For General cleaning, when possible please use a pressurized air canister to clear.
- Use a damp cloth to wipe down the exterior surfaces of the machine.
- Never scrape at the surface of your Launcher with a sharp object, or use any harsh abrasives or solvents.
- Loose debris can be vacuumed out of the Launcher.
- Never use a water hose to attempt to remove debris out of the interior of the machine. Water pressure will damage the sensitive electrical components, as well as increase the risk of electric shock.

STORAGE

The following actions will ensure optimum performance:

- When the Launcher is not in use, it should be stored in a dry and clean area.
- Excessive exposure to wind, rain, sunlight, etc. can often interfere with the operation of the sensitive electrical components and cause fading and/or other damage to Slinger Bag exterior.
- Do not store the battery for more than 30 days without recharging it to a minimum 30% level.
- We recommend that the Slinger is stored at temperatures between 18°C - 28°C, away from direct sunlight.

